



GARNET GLOW_K


USER MANUAL

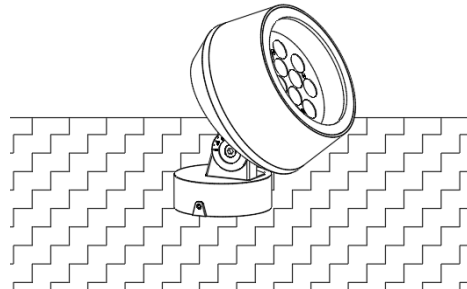


1. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
2. No supplied water-proof box, installation should be advised by qualified professional.
3. The external flexible cable can not be replaced. If the cable is damaged, the luminaire should be discarded.

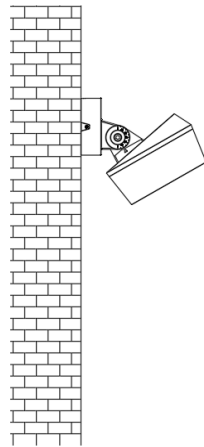


Installation 1

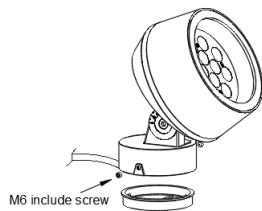


1. Loosen M6 screw and remove lamp base bracket

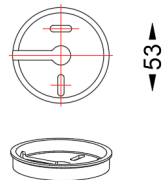


2. Drill two holes on the wall or floor according to the hole position of the base bracket, and put rubber plugs or wood blocks into the holes.

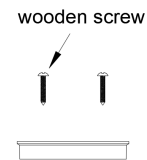


3. Fix the base bracket with wood screws

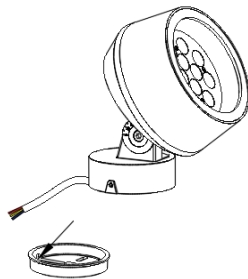


4. Insert the power cable into the side hole of the base bracket

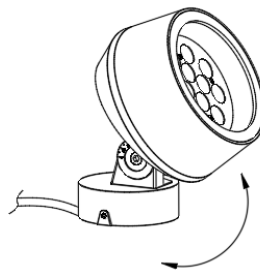


5. Put the lamp into the base bracket, and adjust the X axis Angle of the lamp and then lock the screw.

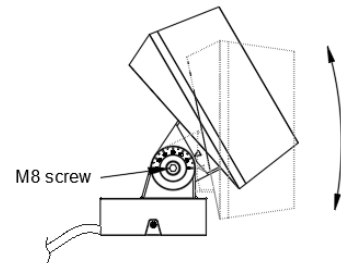

6. Loosen the base M8 cup head screw, adjust the Y axis Angle and then lock the screw.

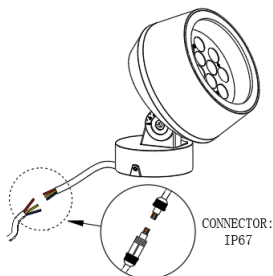


7. Put the power cable and the power cord of the lamp into the IP67 waterproof joint.

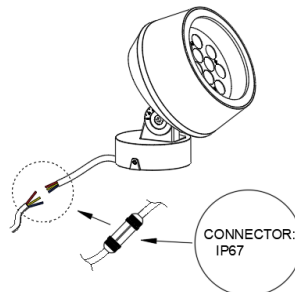


8. Connect the power cable, and then lock the waterproof connector.

Installation 2


Step 1-3 as above

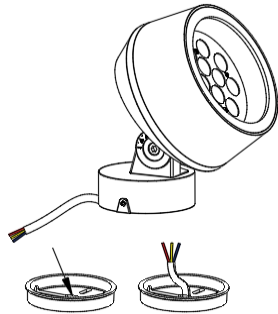


4. Drill a threading hole in the center of the base bracket and the wall, and then put the power cord of the lamp into the center of the base bracket or connect a power cord out of the wall.

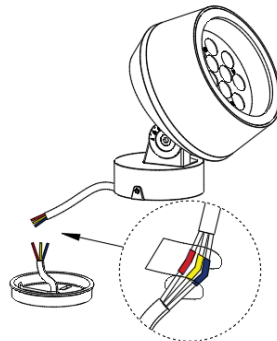

5. Connect the power cord with the power cord of the lamp, and then tie it with waterproof tape (waterproof measures must be taken).

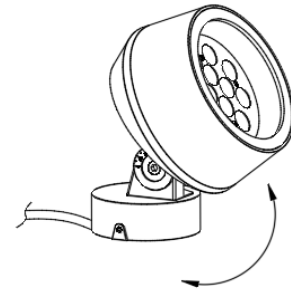

6. Put the long power cord into the base, and then put the lamp into the base bracket, and adjust the X axis Angle of the lamp and then lock the screw.

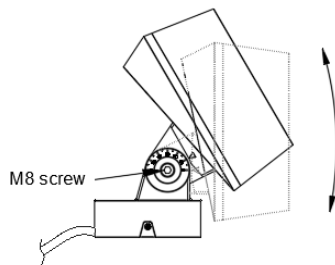

7. Loosen the M8 cup head screw of the base, adjust the Y axis Angle of the lamp and then lock the screw.