


# REGENT User manual

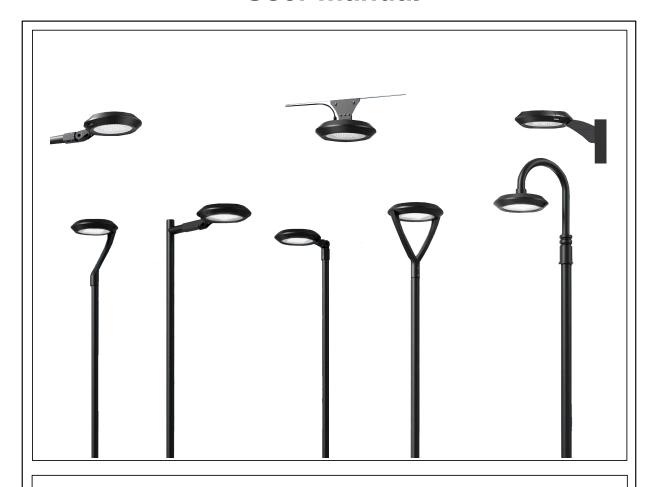




- 1. The luminaire shall be installed by a qualified electrician and wired in accordance with the latess IEE electrical regulations or the national requirements.
- 2. No supplied water-proof box, installation should be adviced by qualified professional.
- 3. The external flexible cable can not be replaced. If the cable is damaged, the luminaire should be discarded.



#### **Installation Instructions**

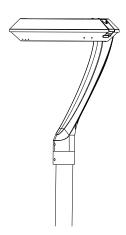













#### **Physical Dimensions**

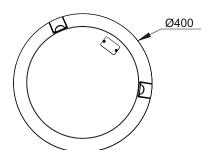

 


### Twist Lock Photocell(Optinal)

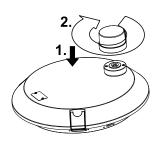


 



Note: If the luminaire use 3 pin or 5 pin or 7 pin NEMA, it need to add a waterproof gasket between socket and photocell controller.

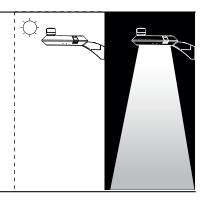



## 3 CCT+4 Power selectable(Optional)

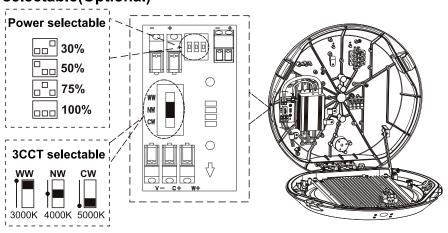


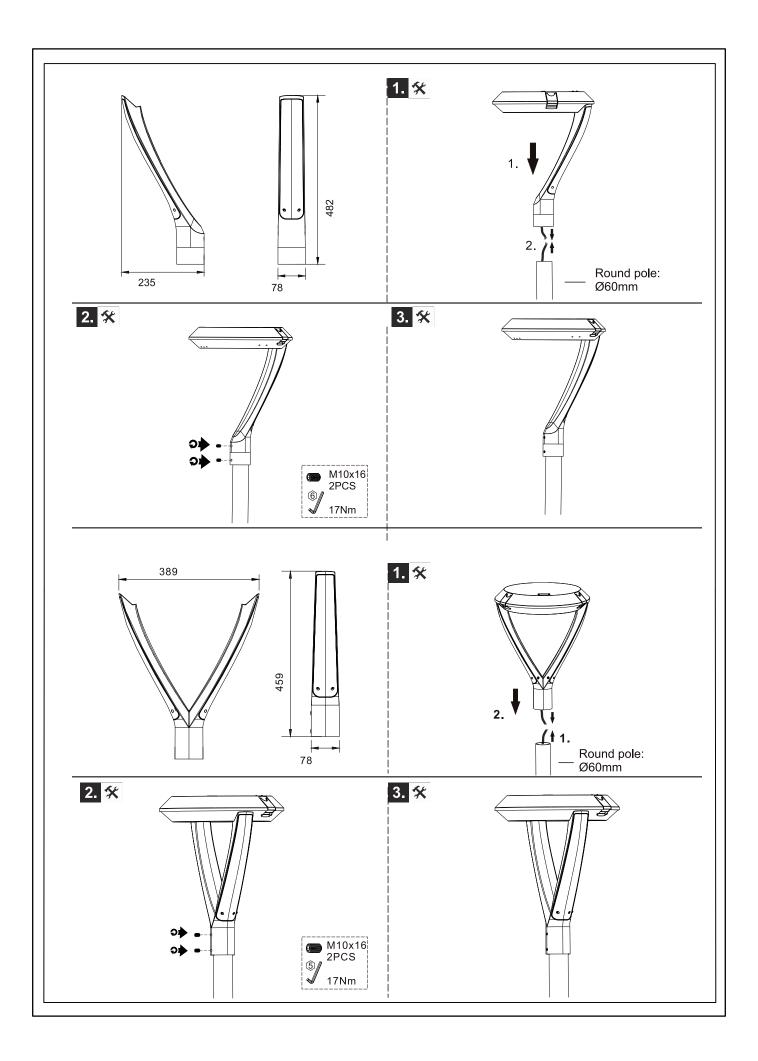

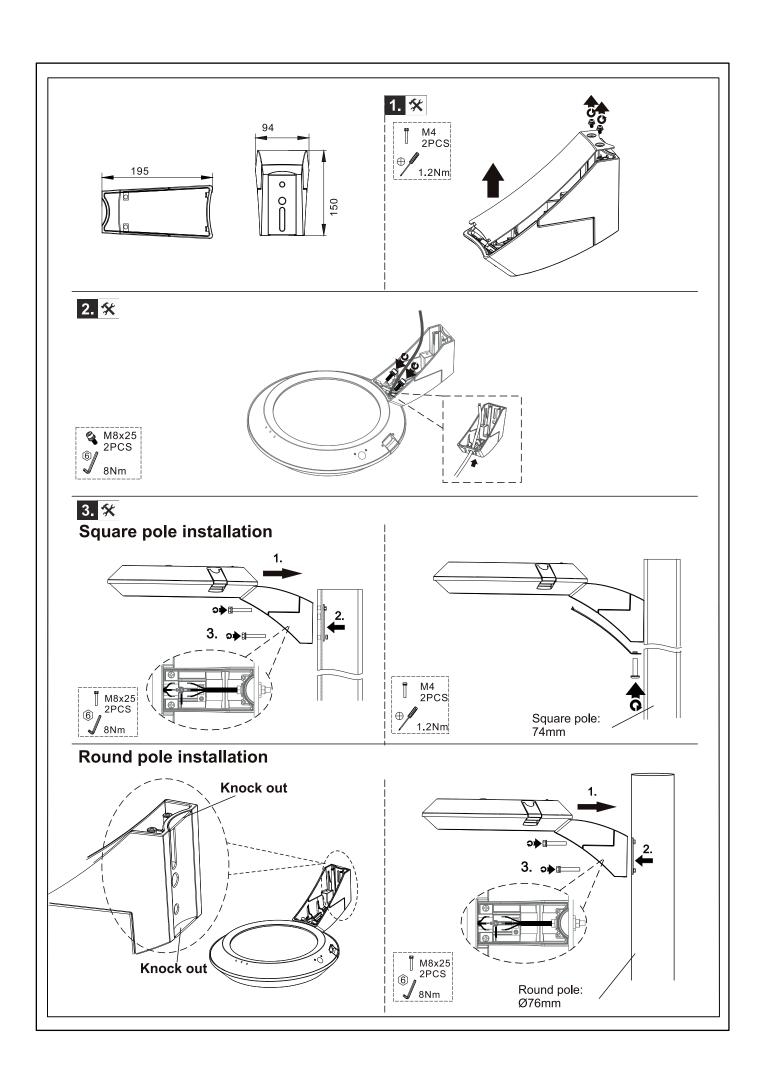

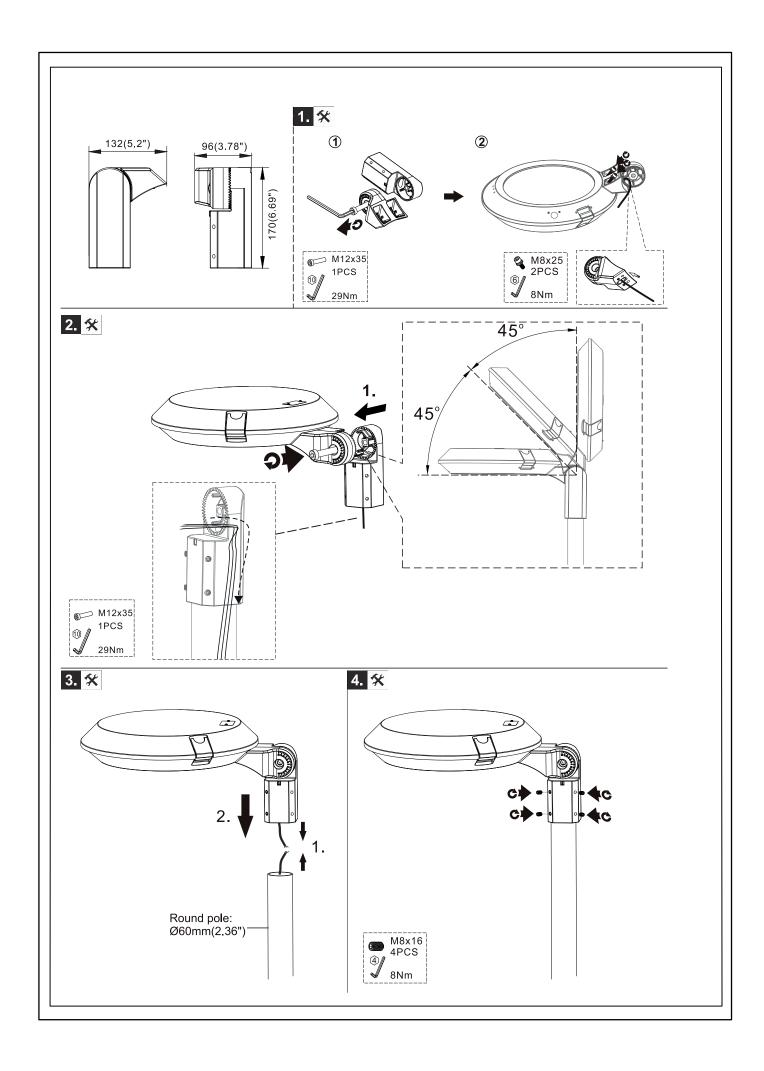

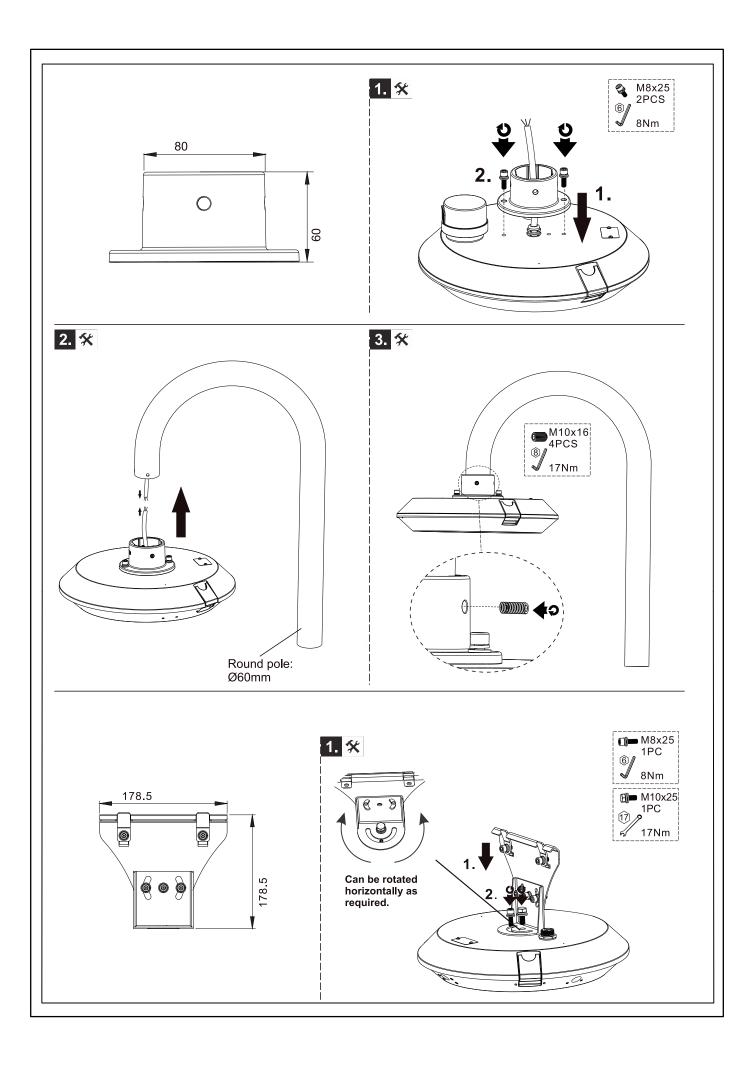

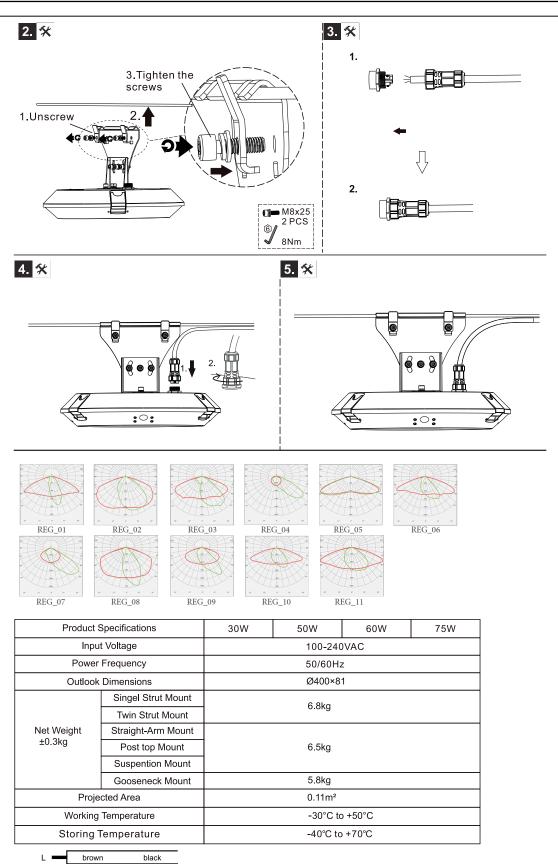

L <b>─</b>	brown	black
N <b>—</b>	blue	white
⊕ GND —	yellow/green	green

- Please make sure the luminiare is properly grounded.
  The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.