

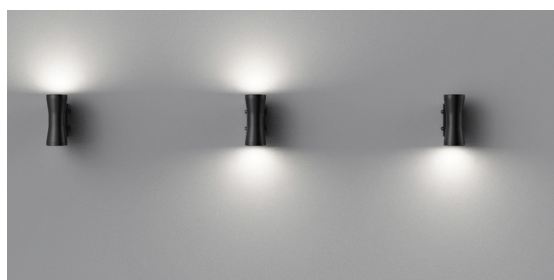
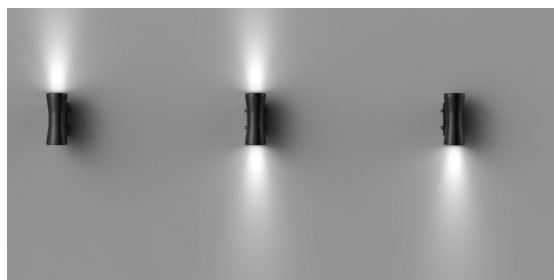
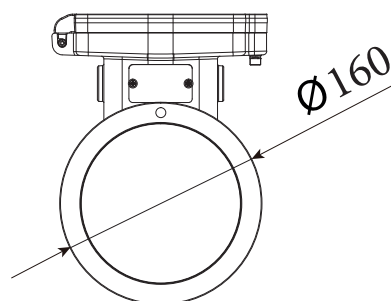
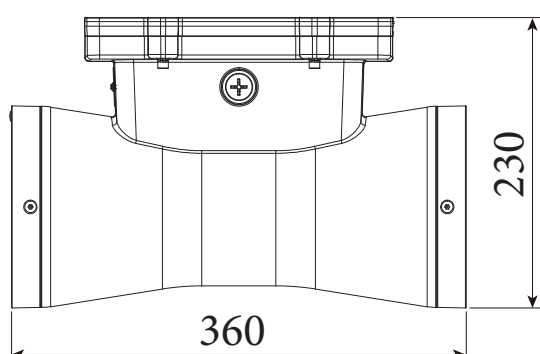



 


ROMUS W User manual

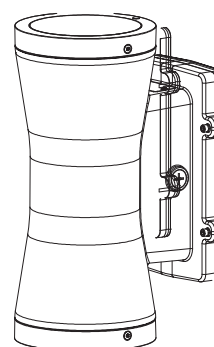


1. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
2. No supplied water-proof box, installation should be advised by qualified professional.
3. The external flexible cable can not be replaced. If the cable is damaged, the luminaire should be discarded.



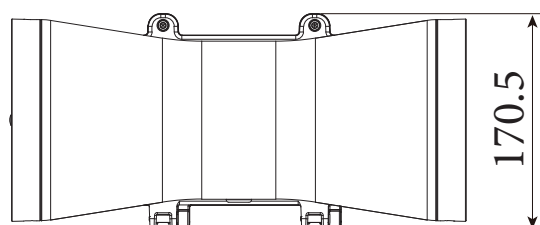


Installation Instructions

Packing List		
	EVA	1PC
	Screws	4PCS
	Expansion screws	4PCS
	Silicone seals	4PCS
	Waterproof connector	1PC

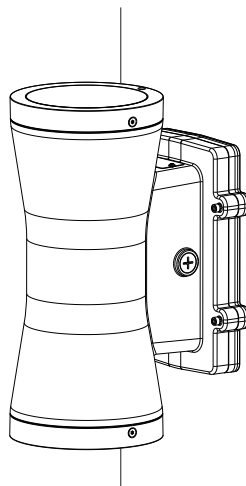


Physical Dimensions

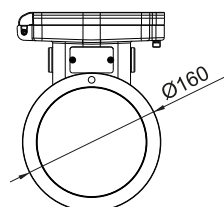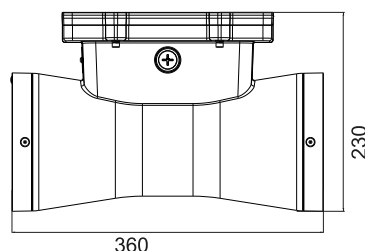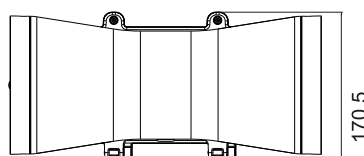


Product Specifications	20W	40W	60W
Input Voltage	100-277Vac/ 120-277Vac/ 100-240Vac/ 220-240Vac (Subject to the input voltage on nameplate)		
Power Frequency	50 / 60 Hz		
Outlook Dimensions	360x230x170.5mm		
Net Weight	4.3±0.3kg		
Working Temperature	-30°C to + 50°C		
Storing Temperature	-40°C to +70°C		

Installation


1. ✂

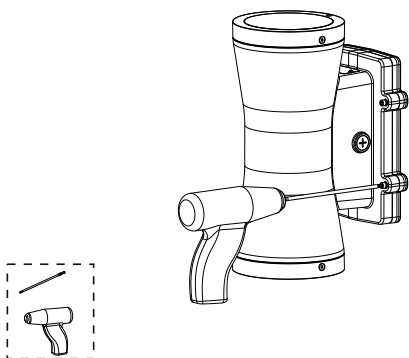

2. ✂

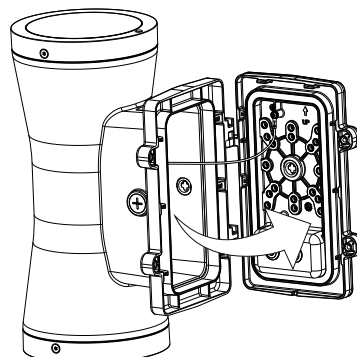


3. ✂

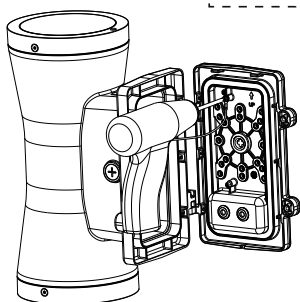


Remove the screw and the ground wire

4. ✂



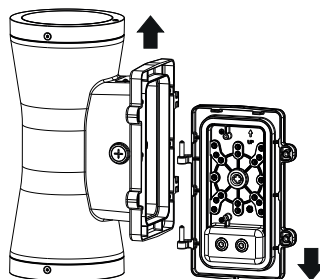


5. ✂

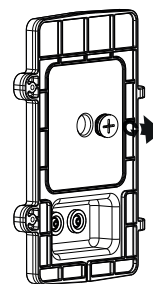

6. ✂

Panel hole size

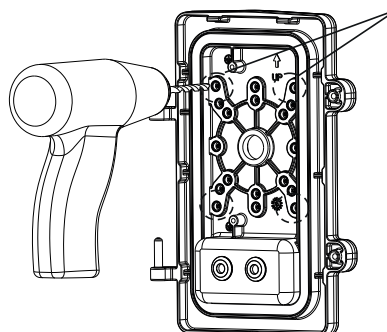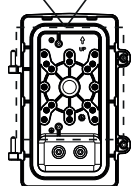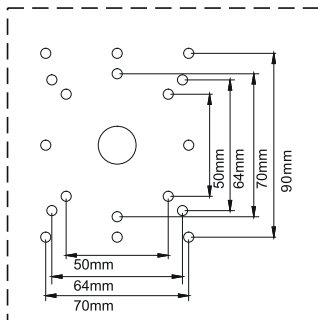

Drilling distance

