
WETAR-B

USER MANUAL




1. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
2. No supplied water-proof box, installation should be adviced by qualified professional.
3. The external flexible cable can not be replaced. If the cable is damaged, the luminaire should be discarded.

1. DRAWING

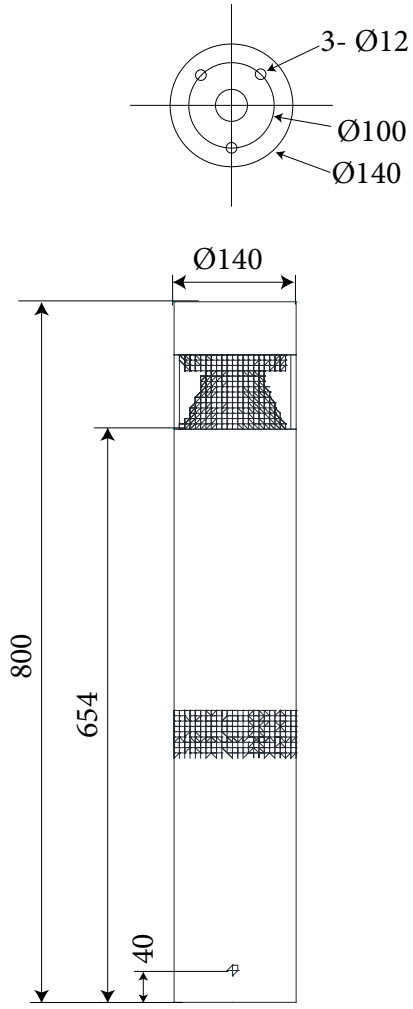

2. INSTALLATION

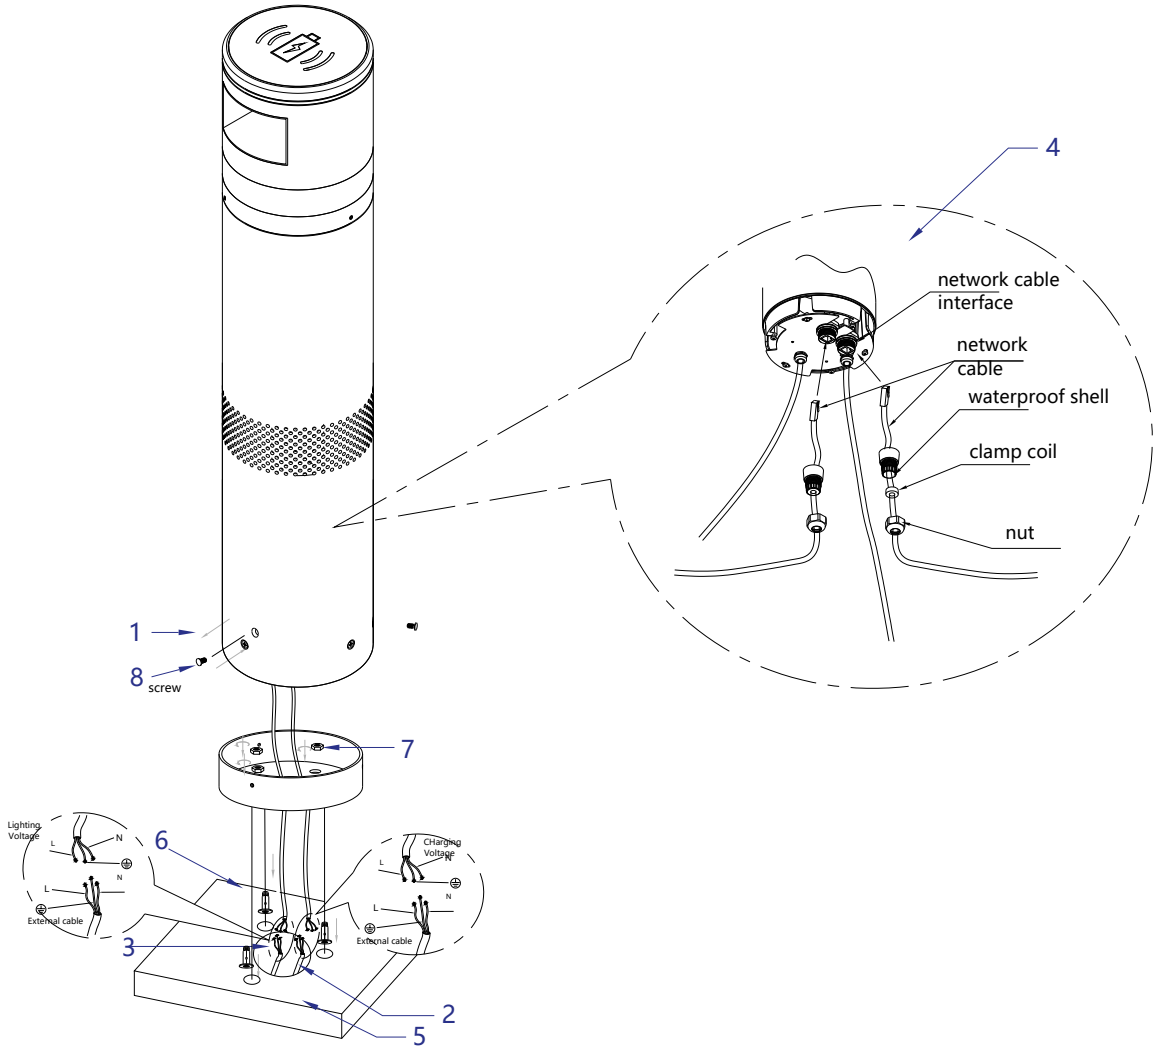

3. INSTALLATION STEPS

1. Loose the base screw and remove the base;
2. Drill installation line holes in the installation surface;
3. According to the L, N and ground wires, corresponding to the wiring, no connection reverse and connection error;
4. Remove the nut, clamp coil and waterproof shell of the nylon cable waterproof joint, pass the network cable through the nut, clamp coil and waterproof shell respectively (the crystal head can pass through the nut and clamp coil), then insert it into the network cable inteface, and finally reinstall the nut, clamp coil and waterproof shell to the main body of the waterproof connector and tighten as required (Note: The network cable connector is not divided into input and output);
5. Drill the expansion screw holes on the installation surface at the corresponding positions of the base;
6. Drive the expansion screw into the expansion screw hole;
7. Tighten the expansion nut;
8. Install the three screws and tighten.

CAUTIONS

1.Please read this installation instruction carefully before installation, and must install by professional. When installing the wire, please confirm that it is in a power-off state to avoid electric shock;
2. After installation, check whether there is a short circuit in the circuit before commissioning, and whether the power supply voltage is correct, in case to avoid the product not be used normally or lamp damaged;
3. The product shall not be disassembled without permission by our company.